


Dimensiones Bobinas

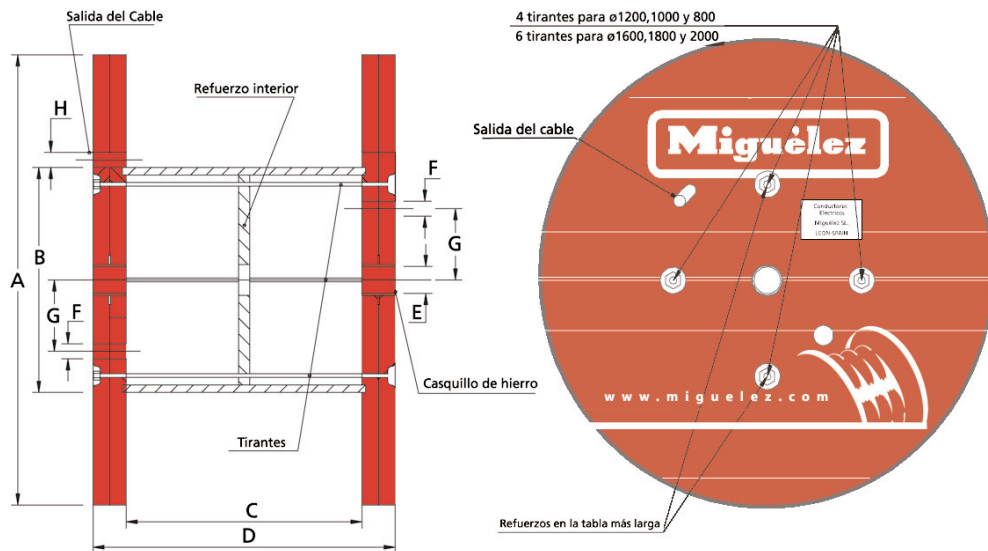

A	B	C	D	E	F	G	H	Refuerzo Interior
630	300	360	450	82	50	150	30	No
800	400	520	600	82	50	155	30	No
1000	500	610	710	82	50	210	40	No
1200	600	640	730	82	50	210	50	Si
1250	630	710	810	82	50	210	50	Si
1400	710	810	930	82	50	210	50	Si
1600	700	820	1000	82	50	210	50	Si
1750	1120	960	1100	82	50	210	50	Si
2000	1250	960	1100	82	50	210	50	Si

Bobinas	Numeración
$\phi 600$	06x0000
$\phi 800$	08x0000
$\phi 1000$	10x0000
$\phi 1200$	12x0000
$\phi 1250$	13x0000
$\phi 1400$	14x0000
$\phi 1600$	16x0000
$\phi 1800$	18x0000
$\phi 2000$	20x0000